

## INTENDED PURPOSE/USE

Product intended for domiciles and general use

## INSTALLATION

Technical changes prohibited. Read the instruction before installation. All activities should be performed with the power feed disconnected.

The product may be connected to a power grid that meets the legal requirements for the quality of energy.

## FUNCTIONAL FEATURES

The product is to be used indoors. The product is equipped with a manual electric switch.

## USAGE / MAINTENANCE

All maintenance activities are to be preformed with the power feed disconnected and after the product has cooled down.

Clean only with soft and dry fabrics. Do not use chemical cleaning agents. Do not cove the product.

Enable unobstructed access of air to the product.

The product should be connected to the rated voltage or to the indicated range of voltages.

The product should not be used under adverse conditions, e.g. dust, water, humidity, vibrations, etc.

If the external flexible power cord is damaged, it is to be replaced with a special cord

available only from the producer or its authorized repair technician.

## DESCRIPTION OF MARKINGS AND SYMBOLS USED

P1: Rated voltage, frequency.

P2: Maximum power.

P3: Light source

P4: The product meets the requirements of EU Directives.

P5: Only for indoor use.

## ENVIRONMENTAL PROTECTION

Keep the environment clean. We recommend to segregate the packaging material waste.

P6: The marking indicates the need for selective collection of waste electric and electronic equipment.

Products with such markings may not be disposed off along other general waste under the pain of a fee.

Such products may have an adverse effect

on the environment and human health and require special processing, recovery, recycling and/or disposal.

Information on collection points is provided by local authorities or sellers of such products.

The waste electric and electronic equipment may also be returned to the seller in case of purchase of a new product

of the same type in a quantity, not higher than the equipment to be disposed.

The above rules are in effect in the European Union. In case of other countries, the user is to follow the legal requirements

in force in a given country. We recommend contacting our local distributor.

## NOTES / COMMENTS

Failing to follow this instruction may result in, among other things:


fire, burns, electric shock, physical injuries and other tangible and non-tangible losses.

Additional information on Lumeline products are available at: [www.Lumeline.com](http://www.Lumeline.com)

Lumeline is not liable for effects of failure to follow the information presented in this instruction.

# LUMELINE

WWW.LUMELINE.COM

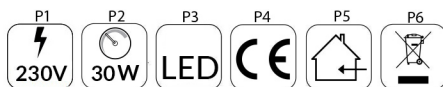

Sunray LED


Made in Poland

# user manual

## package content:


Lamp, base, 2 screws, user manual.

You will need the allen wrench- 5

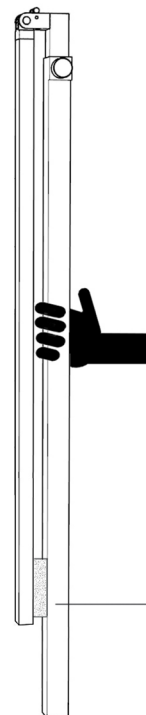


1. Remove the lamp and the base from the box  
Always hold the lamp by its thicker element,  
not by its shade.

This foam is to protect the lamp from scratches during assembly.  
You should be careful especially with the black version  
on which any scratches may be more visible

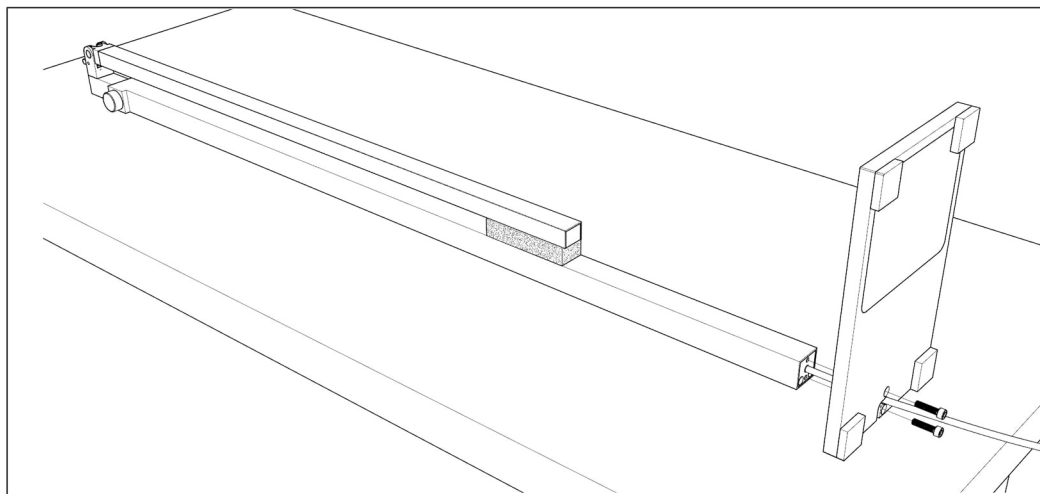


#### 2a. Base assembly

1. Put the lamp and the base on a clean flat surface as shown in picture no. 1.
2. Lay the base on its narrower edge with the cable-notch down, as shown in picture no. 2a

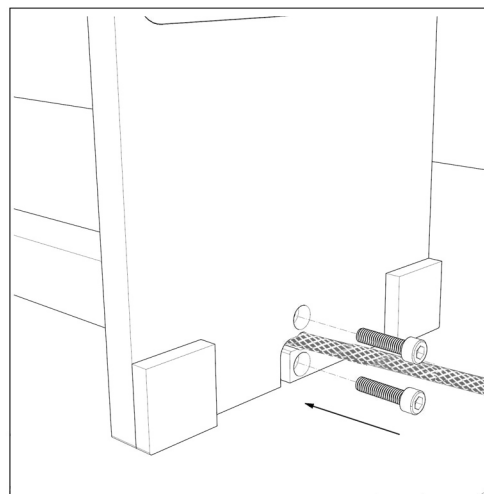


#### 2b

3. Slide the cable into the notch as shown and screw the lamp-post to the base with the two screws.

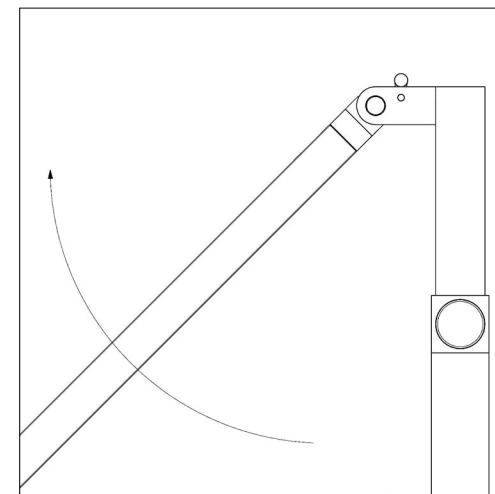


#### 3. Rising the lamp-shade

- Just lift the shade. The ratchet will automatically release, then engage and block the shade-arm in the chosen position.

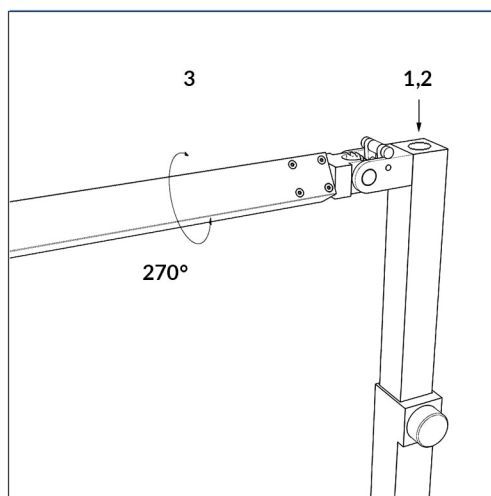


#### 4. Switch/Dimmer

1. Push to turn on the lamp. Touch for a few seconds to adjust brightness.
2. Turn the lampshade arm (max.: 270°) to adjust light-direction.

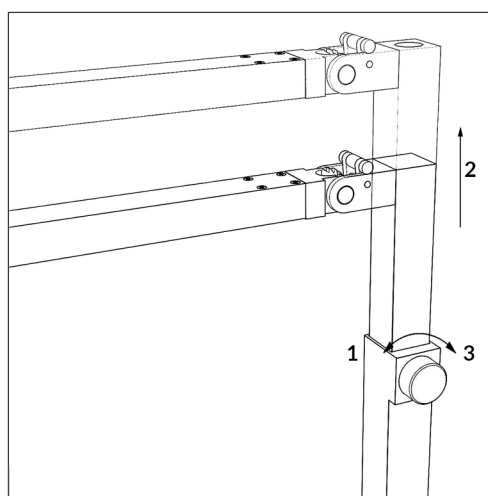

#### 5. Adjusting the height


1. Manually unscrew the side-screw.
2. Rise or lower the foot as desired.
3. Screw the side-screw back. Do not use force – turn just enough to block the foot from sliding down.

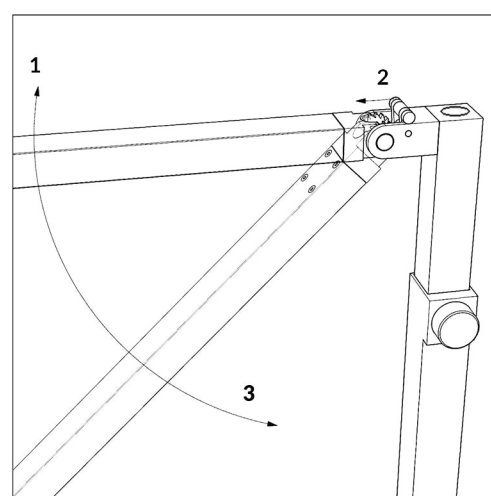

#### 6. In order to decrease the inclination of the shade:

1. Slightly rise the shade to disengage the ratchet,
2. Hold the ratchet-lever in the "open" position and lower the shade to the desired angle.
3. Release the ratchet-lever.

#### Warnungen:

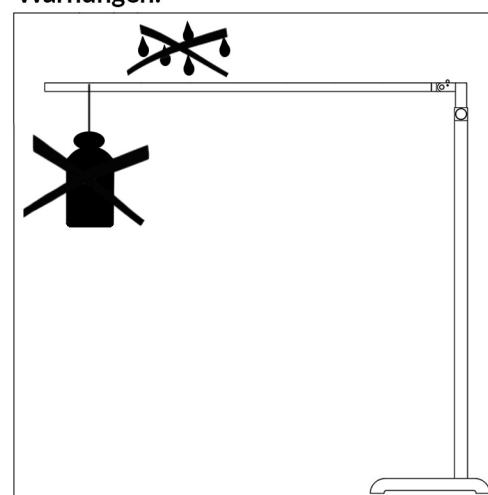

#### 7. Warning

- Do not apply pressure, do not hang anything to, and do not yank the horizontal arm. This may result in losing the right angle it or may tip the lamp over. The lighting horizontal arm must not be covered with anything. Only use in a dry place. Avoid high humidity.